

UIMA-TAS Adapter Wiring Instructions

1. Open the UIMA-TAS adapter box using a slot screwdriver.
2. Plug the 10-pin cable from the UIMA into the right angle header of the adapter.
3. Observing the correct polarity, connect the RS-485 from the TAS-2000 to UIMA-TAS adapter.
4. Connect 12V DC from the TAS-2000 to UIMA-TAS adapter.

Wiring Diagram for UIMA-TAS Adapter Connection

