

Setting Main and Aux Door DTMF

To set the main and aux door DTMF, you must be in **Programming Mode**. Refer to *Entering Programming Mode* on page 2 for instructions.

Main Door DTMF setup

 
Step 1: Select Main Door DTMF setup



Delete Record
>Main Door DTMF

1. Press (scroll up) or (scroll down) to find "Main Door DTMF".
2. Press when the arrow is beside "Main Door DTMF". The display enters Main Door DTMF setup.

Step 2: Set Main Door DTMF




Main Door DTMF
[9]

1. Choose any digit between 0 and 9. This will become the designated (touch tone) number that opens the lobby door. the factory default is "9".
2. Press to save and continue.

You have successfully set the main door DTMF. The display now returns to the programming menu.

Aux Door DTMF setup

 Step 1: Select Aux Door DTMF setup



Main Door DTMF
>Aux Door DTMF

- If you have just set up Main Door DTMF, the arrow is now pointed beside "Aux door DTMF". Press to enter Aux Door DTMF setup.
- If you have not just set up Main Door DTMF,
 1. Press (scroll up) or (scroll down) to find "Main Door DTMF".
 2. Press when the arrow is beside "Aux Door DTMF". The display enters Aux Door DTMF setup.

Step 2: Set Aux Door DTMF



Aux Door DTMF
[6]

1. Choose any digit between 0 and 9. The factory default is "6".
2. Press to save and continue.

You have successfully set the aux door DTMF. The display now returns to the programming menu.