

Setting the Online and Door Timers

To set the online and door timers, you must be in **Programming Mode**. Refer to *Entering Programming Mode* on page 2 for instructions.

Online Timer setup

Step 1: Select Online Timer setup

```
>Online Timer
  Door Timer
```

1. Press * (scroll up) or # (scroll down) to find "Online Timer".
2. Press 0 when the arrow is beside "Online Timer". The display enters Online Timer setup.

Step 2: Set Online Timer

```
Online Timer
[ 0060 ]
```

You can now set the length of time that a visitor may talk with a resident.

1. Enter time duration between 0 to 9999 seconds. The factory default is 60 seconds.
2. Press # to save and continue.

You have successfully set up the online timer. The display now returns to the programming menu.

Door Timer setup

Step 1: Select Door Timer setup

```
Online Timer
>Door Timer
```

- If you have just set up Online Timer, the arrow is now pointed beside "Door Timer". Press 0 to enter Door Timer setup.
- If you have not just set up Online Timer,
 1. Press * (scroll up) or # (scroll down) to find "Door Timer".
 2. Press 0 when the arrow is beside "Door Timer". The display enters Door Timer setup.

Step 2: Set Door Timer

```
Door Timer
[ 20 ]
```

You can now set the length of time the door release stays unlocked.

1. Choose a time duration between 0 and 99 seconds. The factory default is 20 seconds.
2. Press # to save and continue.

You have successfully set up the door timer. The display now returns to the programming menu.