


## LT-698 QX-5000 Mass. Code Upgrade Instruction Rev. 2


1. To prepare QIF-5000 hardware:
  - 1.1. Remove U22 and replace with IC SF-179.
2. To prepare QDV-1000 hardware:
  - 2.1. Remove U3 and replace with SF-180A.
  - 2.2. Remove U7 and replace with SF-180B.
  - 2.3. Connect QDV-1000 TS1, pin 1 to QIF-5000 J4, pin 2.
  - 2.4. Connect QDV-1000 TS1, pin 2 to QIF-5000 J4, pin 1.
3. Additional configuration:
  - 3.1. Set rotary switches to 9 and 7.
  - 3.2. From the Audio Configuration Utility, click QDV-1000 tap to open the following window.

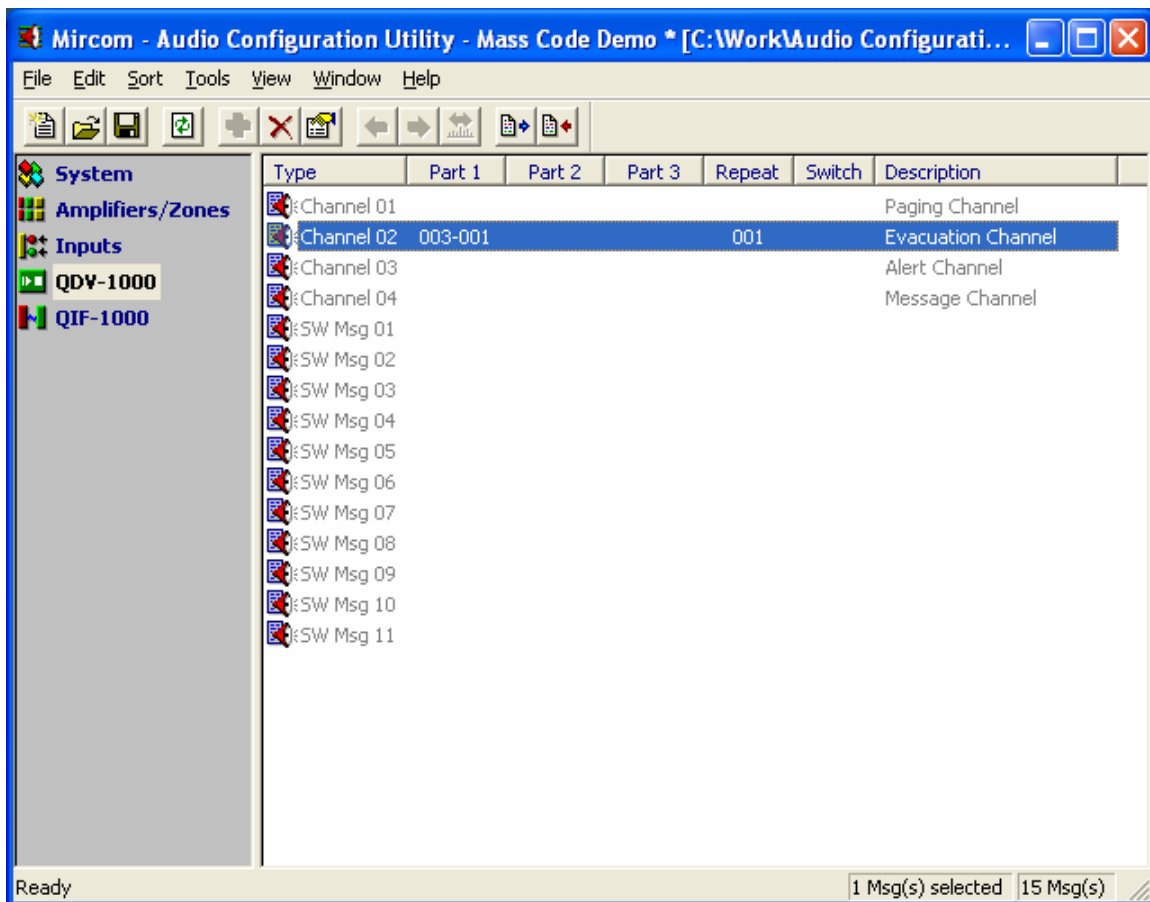

- 3.3. Double click 'Channel 2' to bring up the following window and enter the parameters as shown.



3.4. Make sure the All Evacuation is not checked.

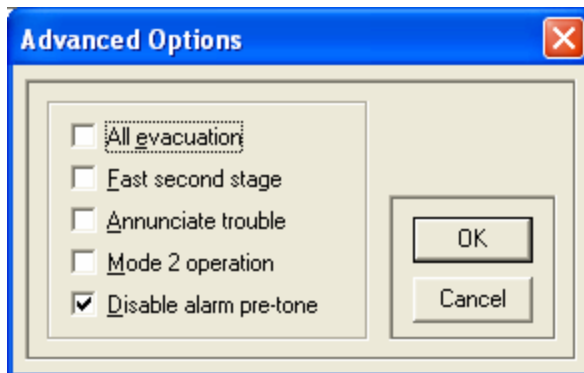

3.5. Carry on configuring the rest of the audio system.

3.6. Download to QIF-5000.

3.7. Change rotary switches back 00.