


- Installation Instruction for GK-019:
1. Remove outside frame A and stick it around the front edge of the BB-700WP.
  2. Remove center pieces B of gasket and place on the back of the pull station covering all the holes.

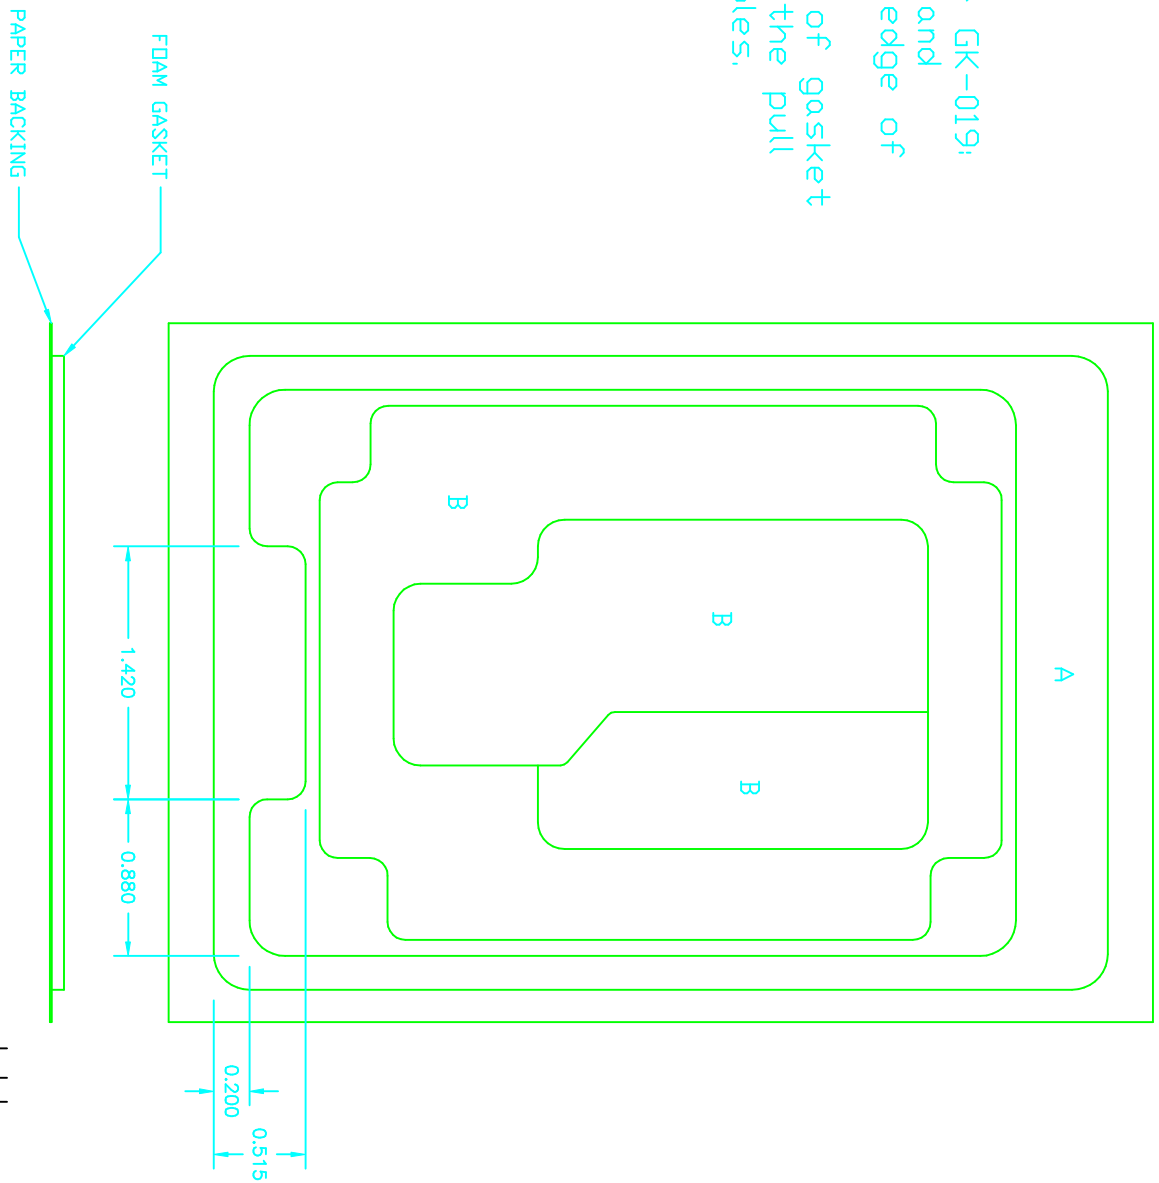

DO NOT SCALE DRAWING

**NOTE:**  
1. MATERIAL: 0.070" THICK FOAM GASKET (BLACK)

<b>MIRCOM TECHNOLOGIES LTD.</b>		REV:   B7	REMARKS
TOLERANCE: X ± .050 IN. XX ± .020 IN. XXX ± .010 IN.	TITLE: INSTALLATION INSTRUCTION FOR GK-019	USED ON: BB-700WP	DWG#:
SCALE: 1:1	DRAWN: 25JUL2005	APPROVED:	LT-1016